


2016 Volvo XC 90



- Remove two bottom screws at the bottom of the seat back and slide the seat back up to remove.
- With the seat back off you will then need to unhook the material from the plastic hooks at the top of the seat back shown below.



- By flipping the material up towards the headrest you will be able to locate the plastic release clips for the headrest.

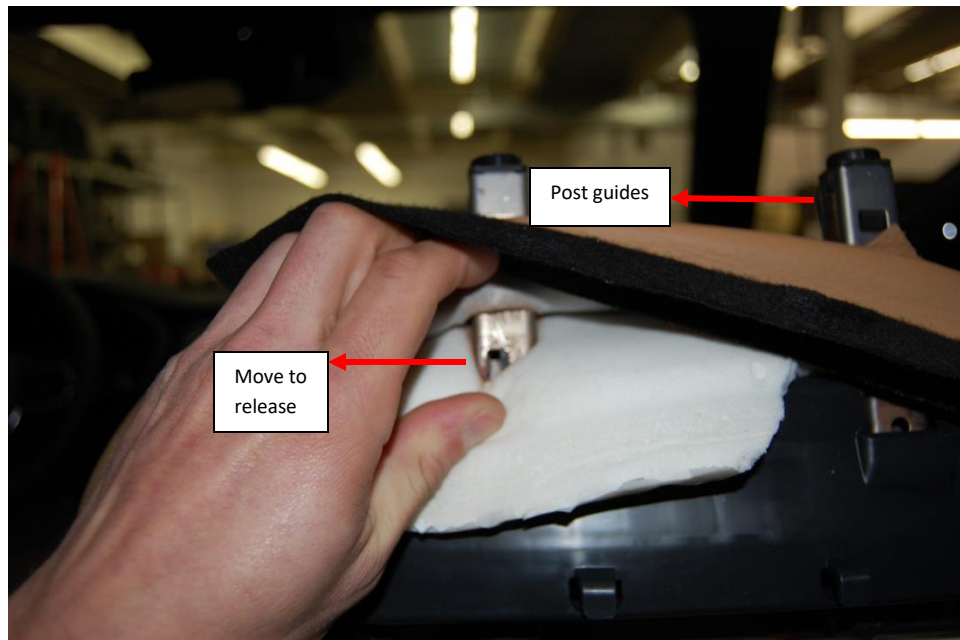

- Using a flat head screw driver you will need to depress the plastic post release while pulling up on the headrest.
- After this has been completed for both sides the headrest should slide out with the posts exposing the metal post guides.
- The next step will be to run the post cable wires through the post guides, down the back of the seat, and to the center console.


- There is a split located underneath each seat that will allow you to run wires neatly and easily into the center console.




- The center console has enough room in the inside to make you connections and hide the wires. The side of the console has a split down the side and will allow you




- To obtain ACC power you will need to go to the fuse box located in the passenger side kick panel. The fuses shown below are ACC. Using a relay is recommended.

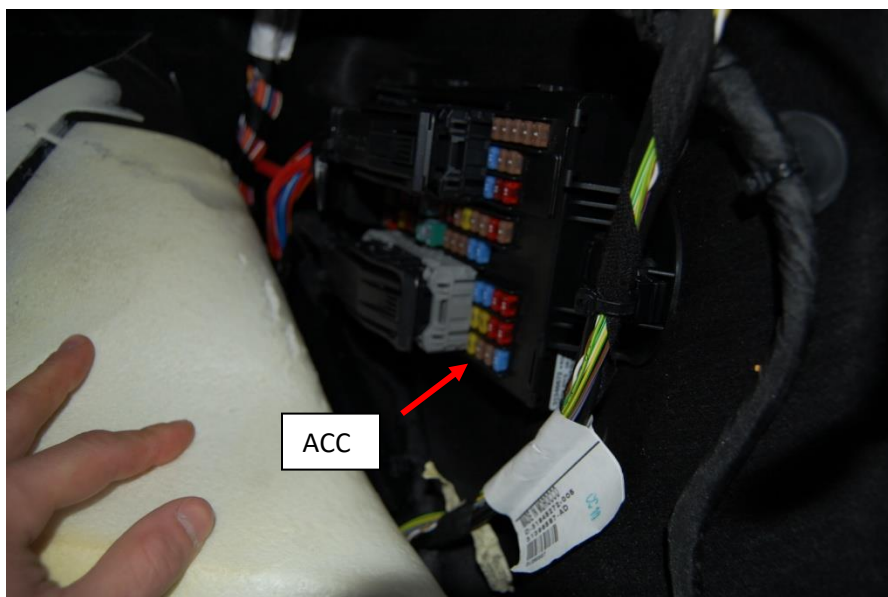

Relay Diagram

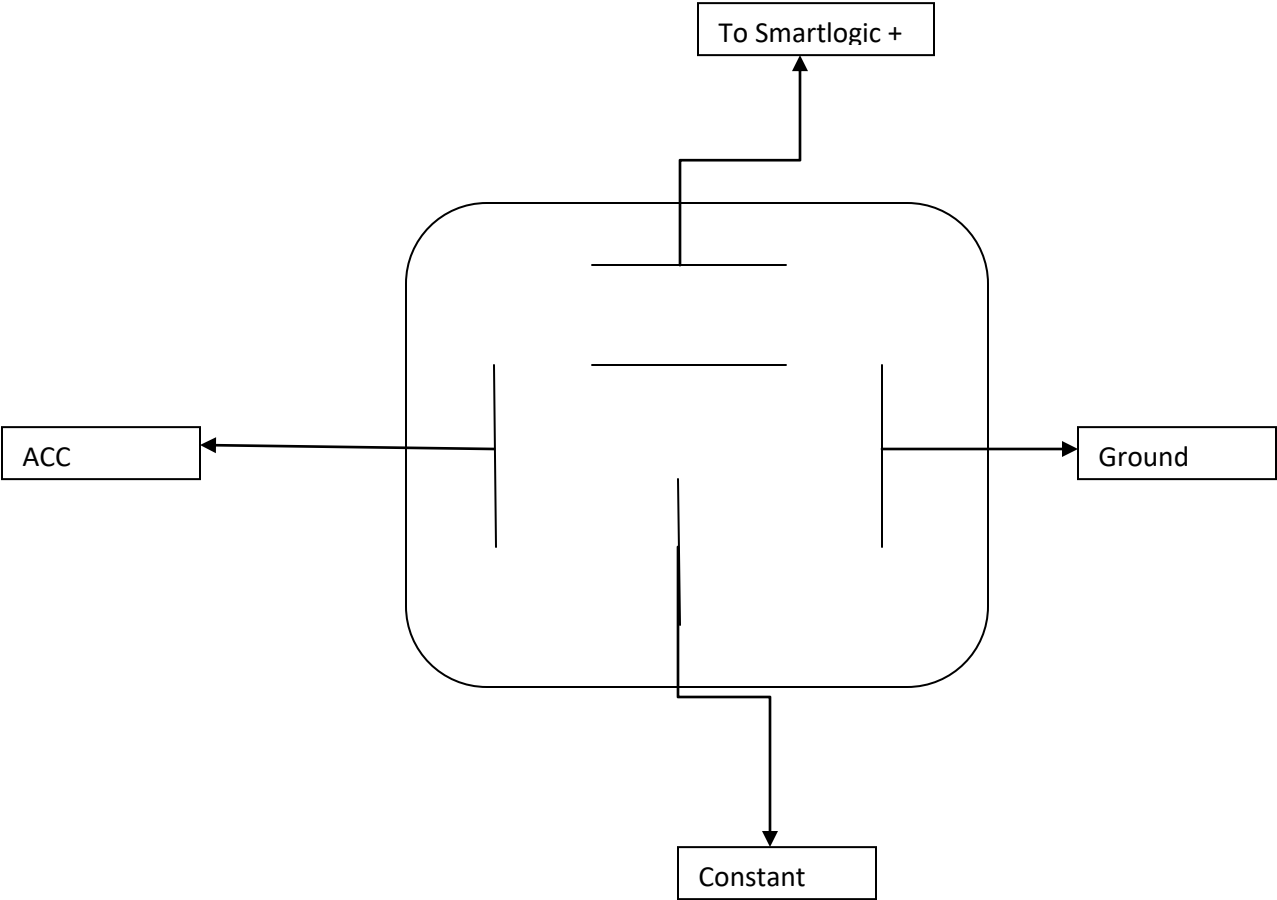

Spider Cable Connection

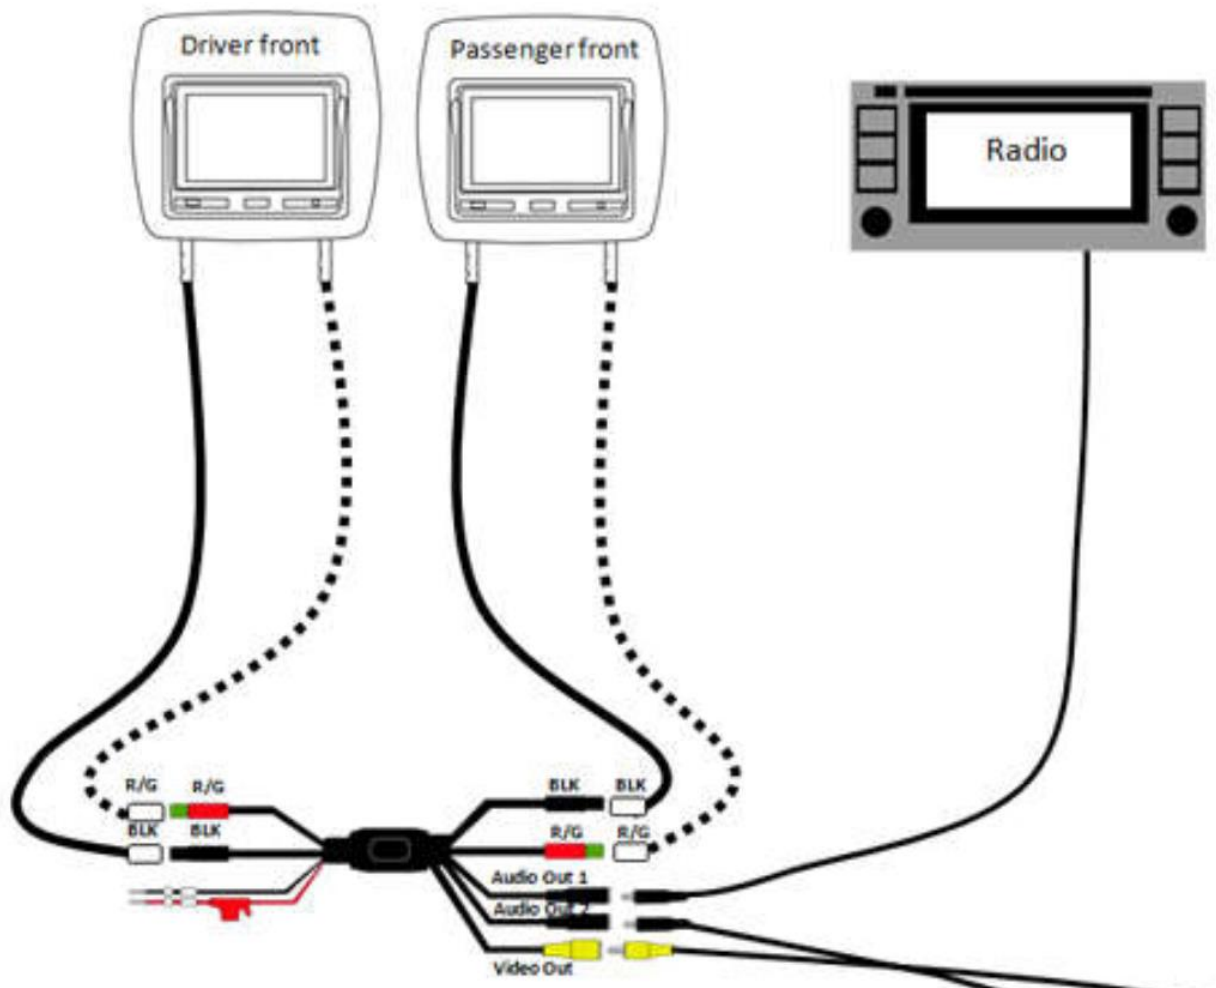

Breakout cables Connection

For connection hook up please follow the diagram as shown below.

