


Universal Active Installation Instructions




Required Tools

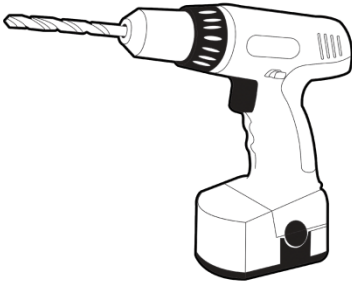

Drill



Crimping Pliers

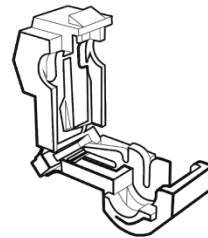


T-Taps & Connectors



Electrical Tape



Zip Ties

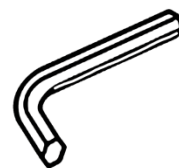

9/64 Allen Wrench

Universal Active Installation Instructions

A. Pre-Installation Precaution

1. Use Seat and Floor protectors to avoid damage to surfaces


Disconnect the battery prior to any ground or harness removal (Recommended). The battery may be temporarily reconnected to perform such tasks as power seat repositioning, testing, or taking the vehicle out of gear. Once tasks are completed, disconnect the battery until the installation is complete and the vehicle is reassembled. If the vehicle is equipped with an Anti-theft radio, the code must be written down prior to disconnecting the battery cable. The code must be re-entered when the negative battery cable is reinstalled. Disconnecting the battery may cause certain vehicle settings to be lost; **Follow manufacturer's recommendations for the battery removal.**

B. Preparing the Active Headrest kit for Installation.

1. Measure the post guide from center to center position. (Figure B1) **Note: Factory headrest removed for image purposes.**
2. Compare the center to center measurement with the Universal Active Assembly Brackets (Figure B2). Our brackets come preset to 150mm center to center. If the measurement is the same, skip to section D.
3. If the measurement is not the same you need to adjust the spacing of the metal brackets, refer to (Section C)
 - **Remove docking station from headrest assembly.** If you are unfamiliar with how to remove the docking station, please visit [link below](http://www.vizualogicdirect.com/install) and locate the tutorial video located at the bottom of the page.

www.vizualogicdirect.com/install

“Phoenix 7 Bucket Removal”

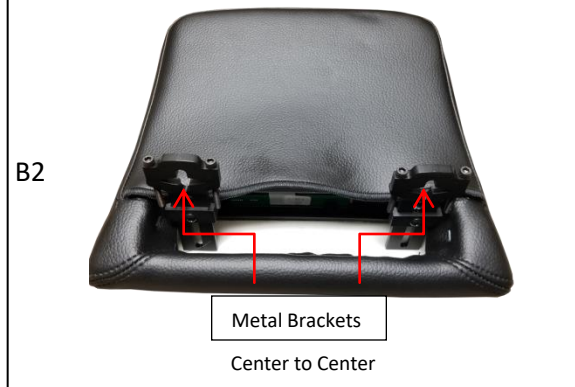

Universal Active Installation Instructions


C. Adjusting Bracket Spacing.

1. With the docking station removed, locate the 4 Phillips screws that hold the metal brackets to the silver metal back plate. (Figure C1)
2. Loosen the 4 screws and adjust the metal brackets to the appropriate spacing; different measurements are labeled on the silver back plate in millimeters. (Figure C2)
3. Tighten the metal bracket screws and reinstall the docking station.

C1



C2

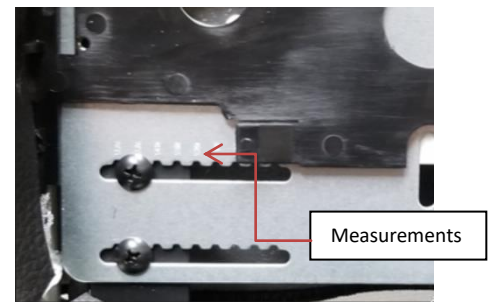

D. Running the Active Cables

1. **Note: This should be done by a qualified installer.** Run both post cables in between the plastic post guide and the seats material. Sitting behind the seat, run the Black tipped post cable down the left side and the Red tipped post cable down the right side. (Figure D1)
2. Route cables through the seat and into the center console.

D1



E. Mounting and Power Connections

1. Slide the black brackets under the factory seat post guides. Cables should run underneath the metal brackets. (Figure E1)
2. Secure the brackets with the 2 Allen bolts. Bolts will screw in from the front of the seat to the back of the seat. (Figure E1)
3. Locate a reliable Accessory power and Ground location.
4. Splice the kits Red fused power wire to the vehicles accessory and connect the kits Black wire to the vehicles chassis ground.
5. Using the diagram located on the following page, connect the driver and passenger side's headrest post cables to the *Spider Cable* junction.
6. Complete a full functionality check of the system and reassemble.

E1



Universal Active Installation Instructions

Wiring Diagram

